Infinity One
User Manual

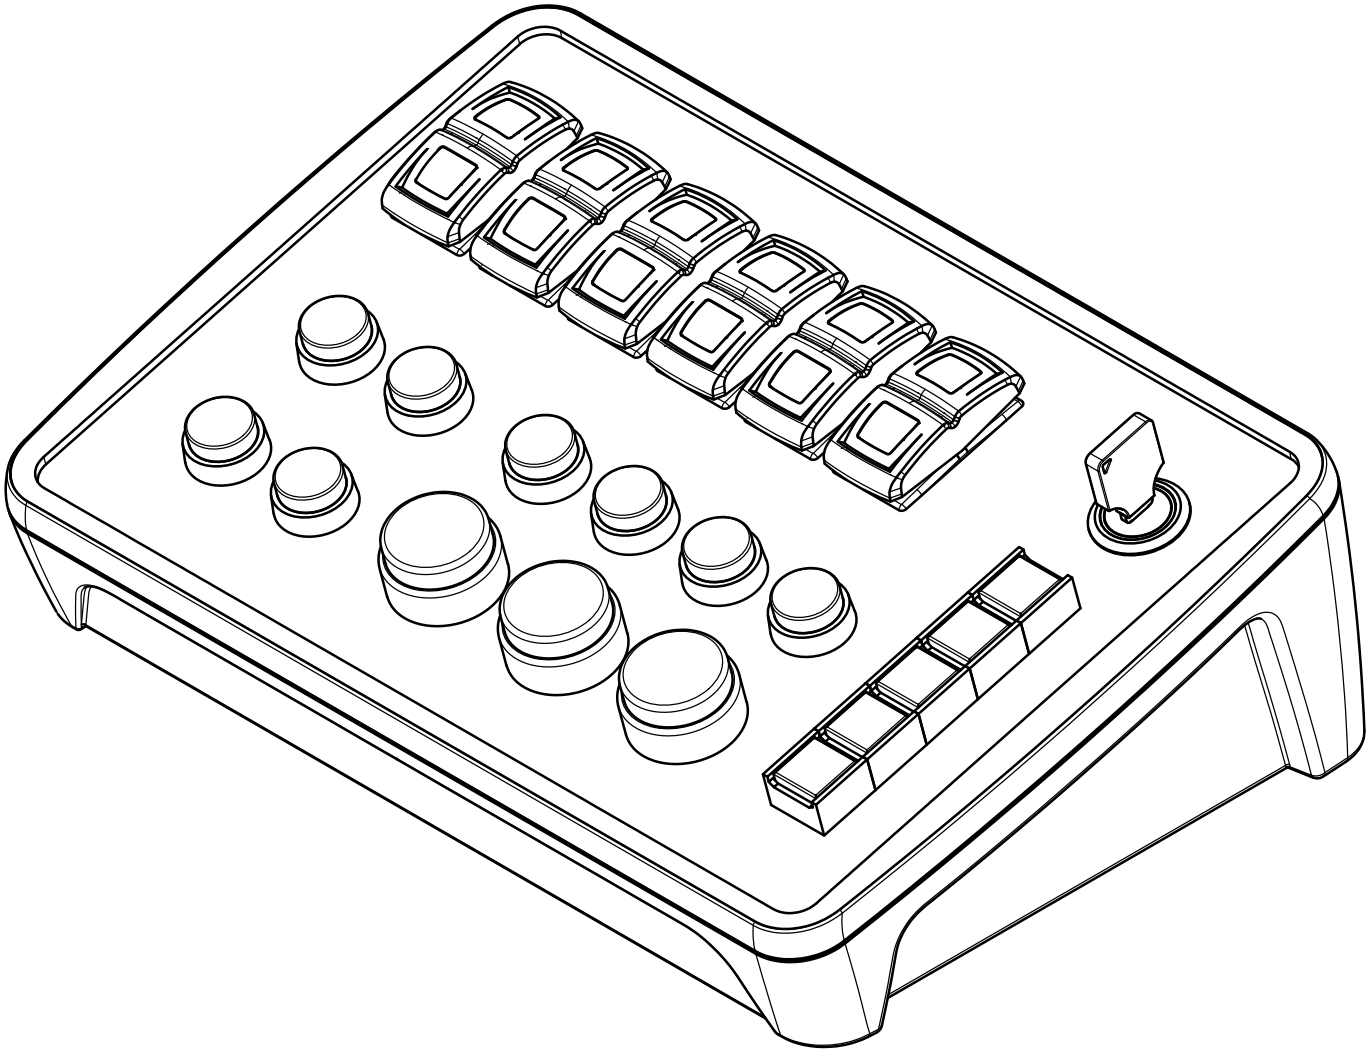

Version: 1.0.0

Published by:

Eight Bit UG (haftungsbeschränkt)
Hindenburgstraße 6a-10a
c/o Gründerquartier
42853 Remscheid
Germany

Contents

Introduction 2

Before Commissioning 2

Hints 3

Safety 3

Intended Use 3

Breaks 3

Lighting 3

Placement 3

Handling 4

Storage Conditions 4

Care and Cleaning 4

Disposal 5

Product 5

Batteries/Rechargeable Batteries 5

Components 5

Scope of Delivery 5

System Requirements 6

Specifications 6

Warranty 6

Declaration of Conformity 6

Introduction

Infinity One is a series of gaming controllers for computers. Each device consists of a plastic housing designed with a 15-degree ergonomic tilt. On the back, there is a USB-C port and a status indicator made up of four LEDs. Depending on the model variant, different control elements are integrated, some of which are also illuminated. This product is intended for private use only. A PC is required to operate the device.

Before Commissioning

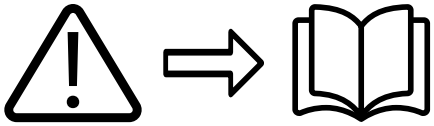

Please read this user manual and the manuals of compatible hardware thoroughly and keep them in a safe place. Only pass the product on to third parties together with this user manual.



If you do not follow the safety instructions and the guidelines for proper handling described in this manual, we accept no liability for any resulting personal injury or property damage. In such cases, warranty/guarantee claims will also be void.

Depending on the software version used, the product may operate differently than described in this manual.

If you have any further questions that are not answered in this manual, please contact our technical support or consult a qualified professional.

Hints

Safety

This product has been developed with the highest safety precautions. However, if used improperly, electrical devices can potentially cause fire, electric shock, or injury. Follow these guidelines to ensure safe operation.



If the device no longer functions normally, if you notice unusual noises or smells, or if it becomes so hot that you can no longer touch it, stop using the product immediately and disconnect all cables.



This product is not a toy. Keep it away from children and pets.



Do not leave packaging materials lying around carelessly. They may become dangerous playthings for children.



Protect the product from extreme temperatures, direct sunlight, strong vibrations, high humidity, moisture, flammable gases, vapors, and solvents.



You should not play when you are tired or in need of sleep.



Do not subject the product to mechanical stress. Handle the product with care. It may be damaged by impact, shock, or even a fall from a low height.



Also observe the safety instructions and operating manuals of other devices to which this product is connected.

If you have any further questions not answered in this manual, please contact our technical support or consult a qualified professional.

Intended Use

For safety and regulatory reasons, you must not modify and/or alter the product. Using the product for purposes other than those described may damage it. Inappropriate use may also result in hazards such as short circuits, fire, etc. Read the user manual carefully and keep it for future reference.

Only pass the product on to third parties together with the user manual. The product complies with national and European legal requirements.

All company names and product designations mentioned are trademarks of their respective owners. All rights reserved.

Breaks

- Avoid using the product for extended periods. Take a 15-minute break every hour.
- You should not play when you are tired or in need of sleep.
- If any of the following symptoms occur, stop using the product immediately. If the symptoms persist, consult a doctor.
  - Dizziness, nausea, fatigue, or symptoms similar to motion sickness.
  - Discomfort or pain in your hands or arms.

Lighting

The product is equipped with lighting elements.

- Do not look directly into the light source.
- Stop using the product if the lighting causes discomfort or pain in or on your body.

Placement

- Do not place the product on unstable or slanted surfaces.
- Do not place the product on the floor or in places where someone might trip over it.
- Do not stand on the product or place other objects on it.

Handling

- Ensure that no liquids or foreign objects enter the product.
- Do not touch the product with wet hands.
- Do not touch the product during a thunderstorm.
- Do not throw, drop, or expose the product to strong impacts.
- Do not insert foreign objects into the product or its connectors.
- Never disassemble or modify the product.

Storage Conditions

- Do not expose the product to high temperatures, high humidity or direct sunlight during operation, transportation or storage.
- Keep dust, smoke and steam away from the product.

Care and Cleaning

Follow the instructions below to prevent damage to the product casing or fading of colors.

- Do not expose the product to high temperatures, high humidity, or direct sunlight during operation, transport, or storage.
- Keep dust, smoke, and steam away from the product.
- Do not place rubber or vinyl-containing materials on the casing of the product for extended periods.

Follow the instructions below to clean the product.

- Use a dry, soft cloth to clean the product. If necessary, slightly moisten the cloth with water.



Do not use aggressive cleaning agents, rubbing alcohol, or other chemical solutions, as they may damage the casing or finish, or even impair functionality.



Do not immerse the product in water or expose it to direct water jets.

Disposal

Product

Electronic devices are valuable resources and must not be disposed of with household waste. Dispose of the product at the end of its service life in accordance with applicable legal regulations. Remove any inserted batteries/rechargeable batteries and dispose of them separately from the product.

Batteries/Rechargeable Batteries

As an end user, you are legally obligated (according to the Battery Ordinance) to return all used batteries/rechargeable batteries; disposal via household waste is prohibited.

Batteries/rechargeable batteries containing harmful substances are marked with the symbol shown here, which indicates the prohibition of disposal via household waste. The abbreviations for the relevant heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead (these designations appear on the batteries/rechargeable batteries, e.g., below the waste bin symbol shown above).

You can return your used batteries/rechargeable batteries free of charge to collection points in your community, to our branches, or anywhere batteries/rechargeable batteries are sold. By doing so, you fulfill your legal obligations and contribute to environmental protection.

Components

The following illustrations show the built-in components. The controls on the front side may vary depending on the model variant, therefore one version is shown here as an example.

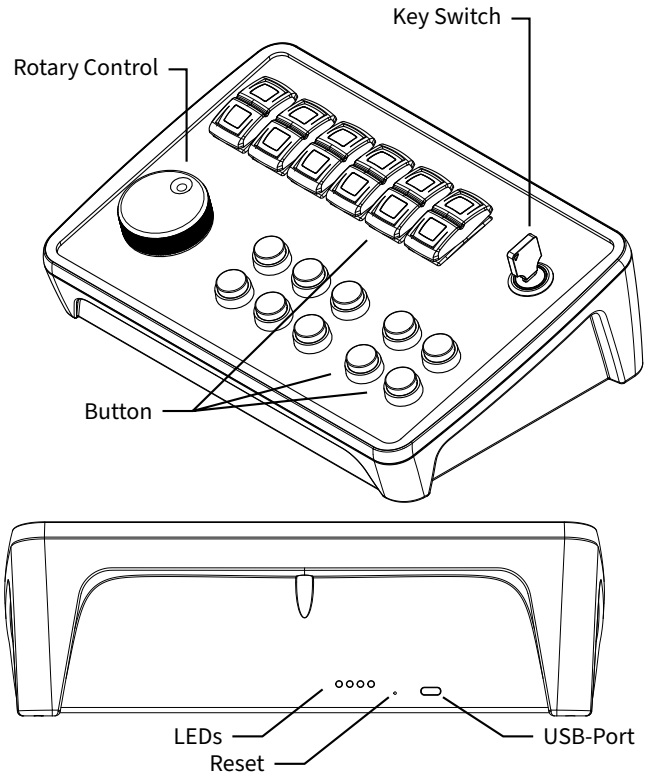

Scope of Delivery

Infinity One is delivered with the following components:

- Infinity One
- USB-C to USB-A cable

A VESA mount is not included in the scope of delivery and must be purchased separately.

System Requirements

Operating System	Windows® 7 / 8 / 10, MacOS
Connection	USB 2.0 or USB 3.0 Port

Specifications

Input Power	5 V / max. 500 mA
Connection	USB-C Connector
Operating Temperature	5 °C to +40 °C
Dimensions (L x W x H)	285 x 198 x 93 mm
Weight	approx. 910 g
Country of Manufacture	Germany

Design and specifications are subject to change without notice.

Warranty

This product is covered by the manufacturer's warranty for 12 months from the date of purchase.

Declaration of Conformity

CE

Hereby, Eight Bit UG (haftungsbeschränkt), Hindenburgstraße 6a-10a c/o Gründerquartier, 42853 Remscheid, Germany, declares that this product complies with Directive 2014/53/EU.